



Internal Use Only


Website <http://biz.lgservice.com>

VACUUM CLEANER SERVICE MANUAL

MODEL : V-C7780CEV

CAUTION

BEFORE SERVICING THE UNIT, READ THE "SAFETY PRECAUTIONS"
IN THIS MANUAL.

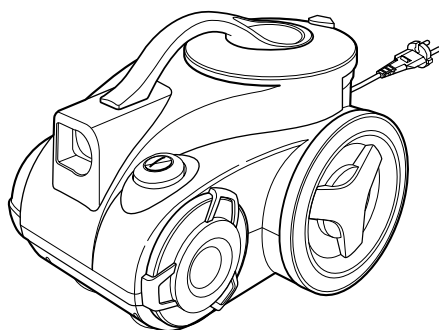

P/No. : MFL35720509

CONTENTS

SAFETY PRECAUTIONS	3
CAUTIONS.....	3
DESCRIPTION	4
SPECIFICATIONS.....	4
DISASSEMBLY	5~6
TROUBLE SHOOTING GUIDE	7~9
BLOCK DIAGRAM.....	10
EXPLODED VIEW	11~13

SAFETY PRECAUTIONS

BEFORE OPERATING THIS VACUUM CLEANER, READ THIS SERVICE MANUAL THOROUGHLY, AND OBSERVE EACH POINT CAREFULLY.

1. Motor filter(Air Cleaner)

- 1) This filter is reusable.
- 2) Never use the vacuum cleaner without filter.
It may damage the motor.
- 3) When the light of body is on, wash the motor filter with water and brush.
- 4) Even if the light is not on, wash the motor filter at least once 6 months.

NOTE : Reusing of the motor filter.

- Never wash the filter in a washing machine or in a dishwasher.
- Never use hot water for washing the filter.
- Reuse the filter after drying it completely in the shade for a day.
- Do not dry near fire or direct sunray.

2. Exhaust filter(Washable HEPA filter)

- 1) This filter is reusable HEPA filter.
- 2) For clean air, this filter must be assembled.
- 3) Wash the exhaust filter with water once a year.
- 4) When the light of body is on, wash the exhaust filter with water.

NOTE : Reusing of the exhaust filter.

- Never wash the filter in a washing machine or in a dishwasher.
- Never use hot water for washing the filter.
- Reuse the filter after drying it completely in the shade for a half day.
- Do not dry near fire or direct sunray.
- Do not brush the filter. This will cause permanent damage allowing dust to by-pass the filter.

3. Avoid suction such materials as :

- 1) Liquid or wet dust :
Clogs the ventilation holes, reduces the suction power significantly and harms the motor.
- 2) Inflammable liquids such as benzene, alcohol or solvents.
- 3) Burning objects such as cigarette butts.
- 4) Bulky objects such as vinyl, paper etc.
- 5) Sharp objects such as needles, pins, metal, glass particles etc.

4. Attachments

- Nozzle : For cleaning wooden floor, the room floor and carpet.
- Dusting Brush and Crevice Tool:
For cleaning any crevice, inside corners of window frames.
For delicate vacuuming of fabrics on the furniture, curtains, etc.
- Upholstery Nozzle : For vacuuming the dust on the upholstery.

However, do not use the crevice tool more than 20 minutes because it may cause harm to the motor.

5. Close supervision is necessary when this vacuum cleaner is used by or near children. Children's carelessness may cause damage to the cleaner or injure persons.

6. Air exhausted from the vacuum cleaner is normally warm. But if extraordinarily hot air is exhausted, check if the telescopic tube, hose or clean filter is clogged or not.

7. Electric shock could occur if used outdoors or on wet surfaces.

CAUTIONS


BEFORE ATTEMPTING TO SERVICE OR ADJUST ANY PART OF THE VACUUM CLEANER, DISCONNECT THE ELECTRICAL POWER SUPPLY CORD FROM THE WALL OUTLET.

1. Motor exchange

- 1) Separate the Body Cover and Body Base by unfastening the screws.
- 2) After disconnecting the lead wires, replace the old motor with a new one.


2. In case of exchanging other parts. refer to the exploded view.

DESCRIPTION

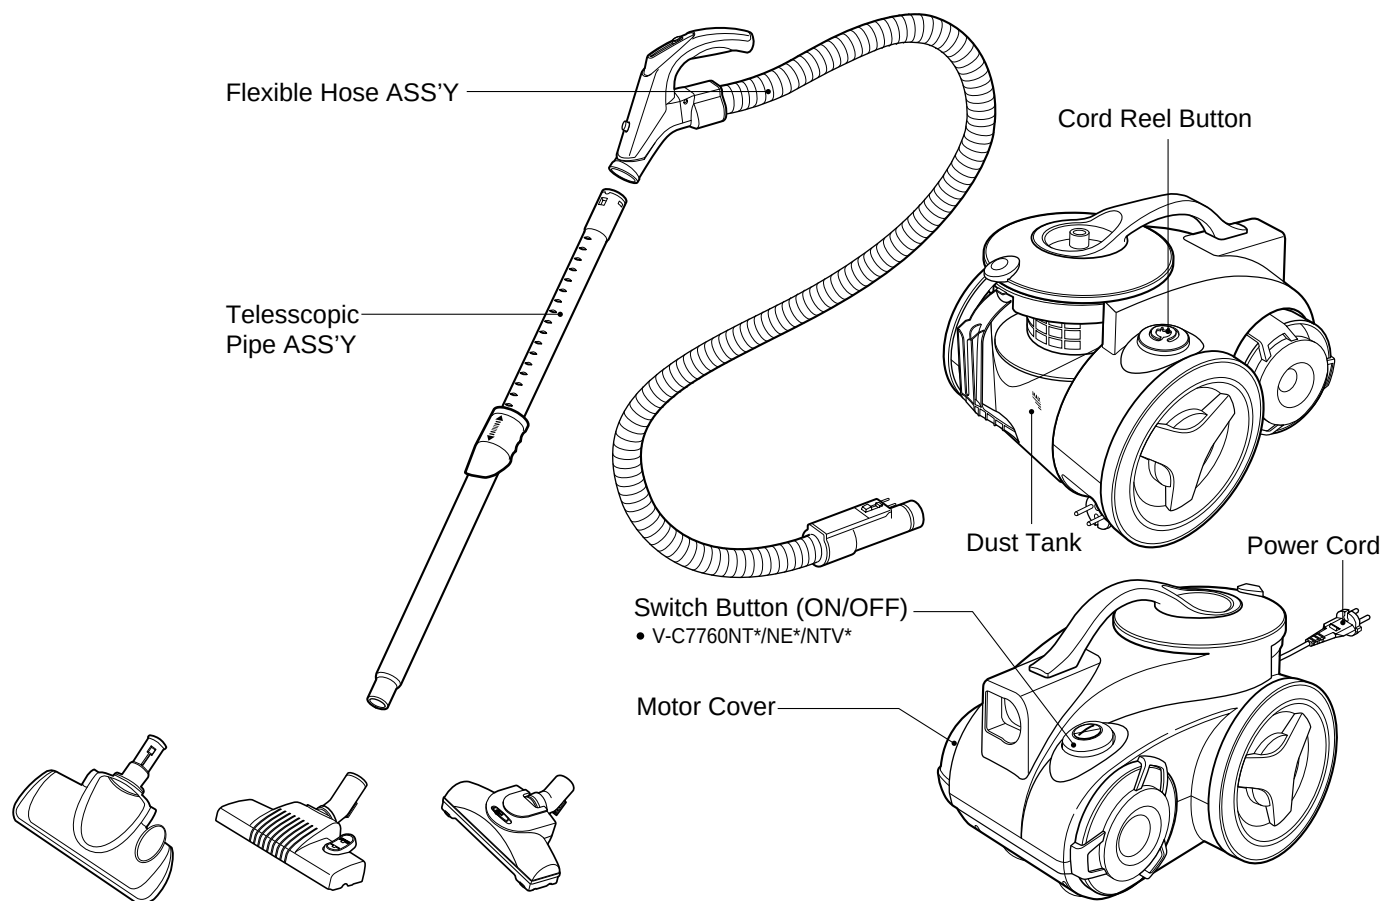


CANISTER

ATTACHMENTS



DUSTING BRUSH & CREVICE TOOL

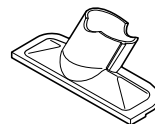

UPHOLSTERY NOZZLE

SPECIFICATIONS

- **MODEL** : REFER TO THE COVER PAGE
- **POWER SOURCE** : ON RATING PLATE
- **POWER CONSUMPTION** : ON RATING PLATE
- **POWER CONTROL** :
 - **MAIN** : SLIDE CONTROL (F/HOSE)
(V-C7750HE*, V-C7760HT*/HE*, V-C7766HE*, V-C7768HEU*)
 - MICOM CONTROL (F/HOSE)
(V-C7770CT*/CE*/CTV*/CEU*)
 - PUSH ON/OFF(BODY)
(V-C7760NT*/NE*, V-C7765NT*/NTV*)
 - SUB** : VACUUM POWER ADJUSTMENT BY SLIDE KNOB (NT*/NE*)

- **CORD LENGTH** : 7 m
- **HOSE LENGTH** : 1.8 m
- **NET WEIGHT** : 5.4 kg
- **PACKING WEIGHT** : 9.4 kg
- **NET DIMENSION** : 298 × 410 × 290 (W × D × H)mm
- **PACKING DIMENSION** : 330 × 565 × 330 (W × D × H)mm
- **ATTACHMENTS**

HOSE.....	1EA
TELESCOPIC PIPE ASSY	1EA
NOZZLE ASSY	1EA
DUSTING BRUSH & CREVICE TOOL	1EA
UPHOLSTERY NOZZLE	1EA
BRUSH ASS'Y	1EA
EXTRA AIR FILTER	1EA

- This specifications are subject to change according to the buyer's request.


DISASSEMBLY

NOTE: Before attempting to service or adjust any part of the vacuum cleaner, disconnect the electrical power supply cord from the wall outlet.


- Almost all of the parts of this vacuum cleaner can be disassembled with a screw driver and each connecting component easily fits each other. Disassemble one by one referring to the exploded view.
- If possible, don't disassemble except for the necessary parts. It is not necessary to disassemble the parts that are not detailed in the exploded view.

1. Body Cover Assembly Replacement


1) Remove the dust tank from the set.

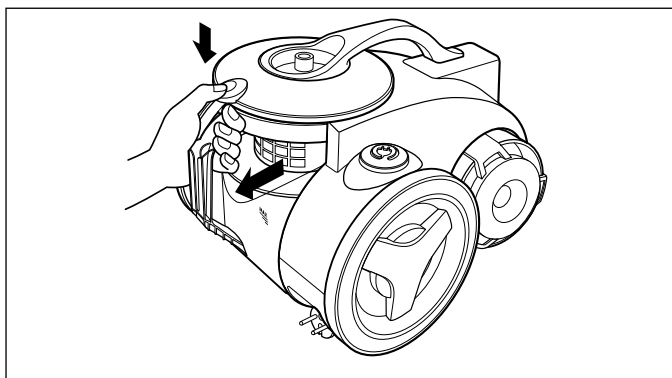

2) Remove the four screws fastening the body base.

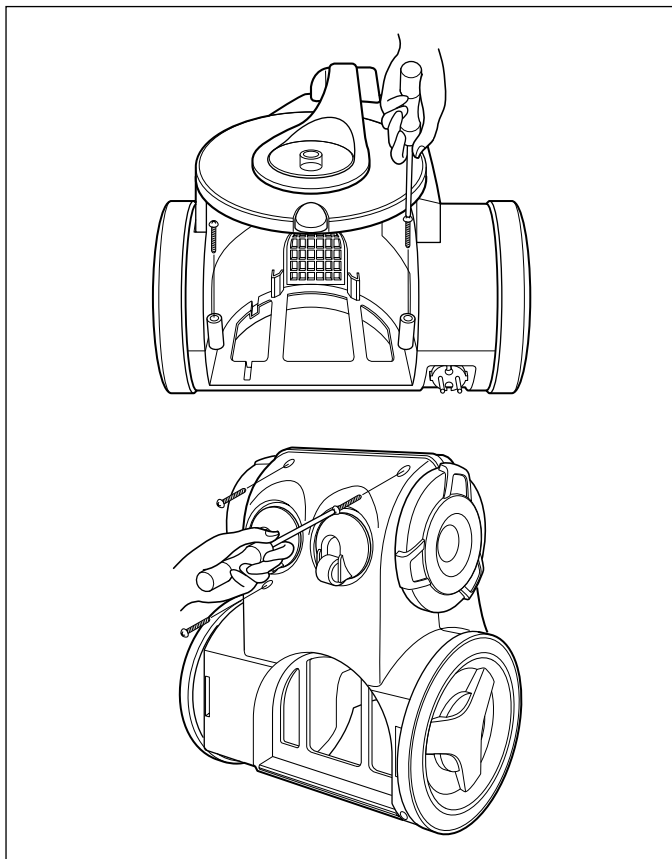


3) Disassemble the body cover, raising the body cover.

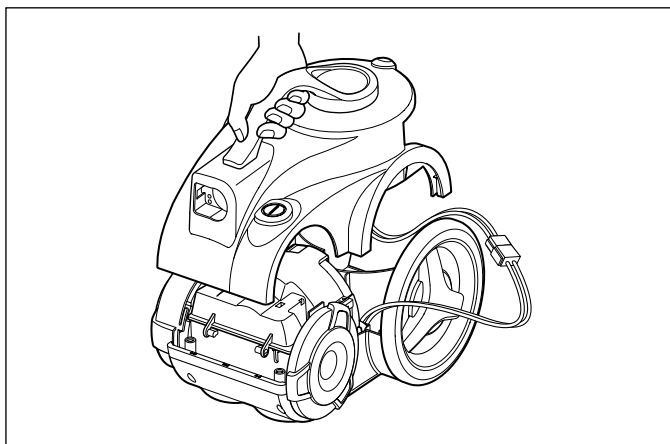


2. Motor Assembly Replacement

1) Detach exhaust cover in the direction of the arrow and unhook the motor cover with "⊖" driver.

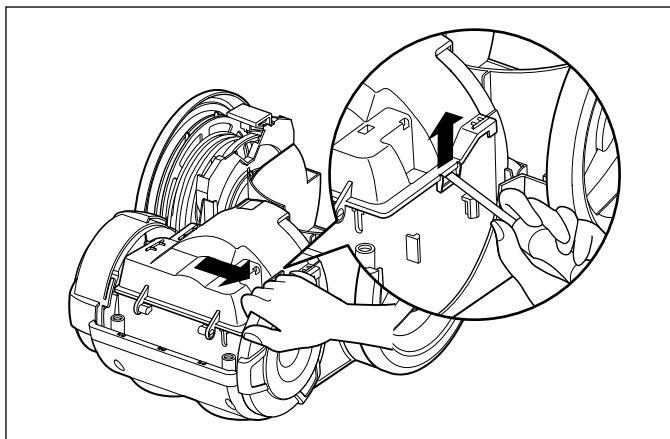


2) Pull out the motor and disconnect the lead wires from it.

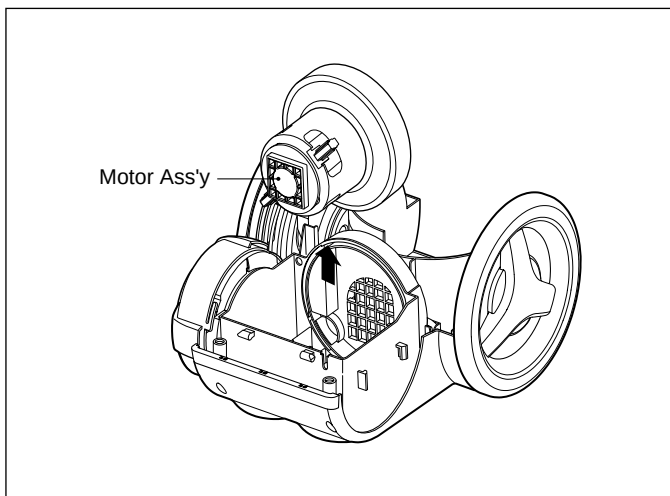


3. Cord Reel Assembly Replacement

- 1) Lift the cord reel assembly from the body base.

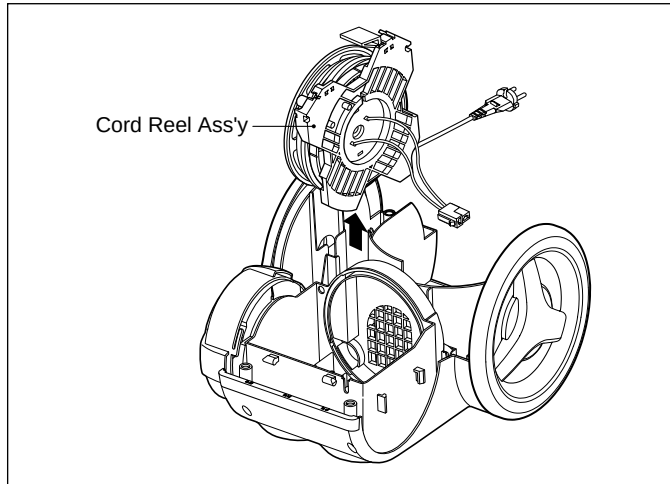


4. Disassembly of Top Cover

- 1) Remove the three screws fastening the body cover and top cover.

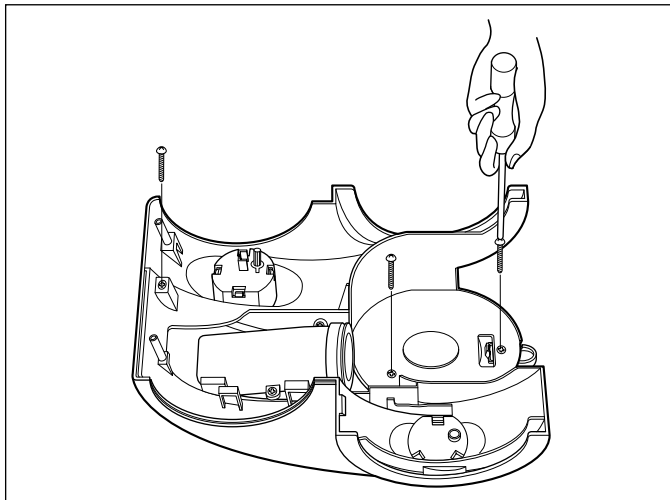


- 2) Unhook the two hooks with "⊖" driver.

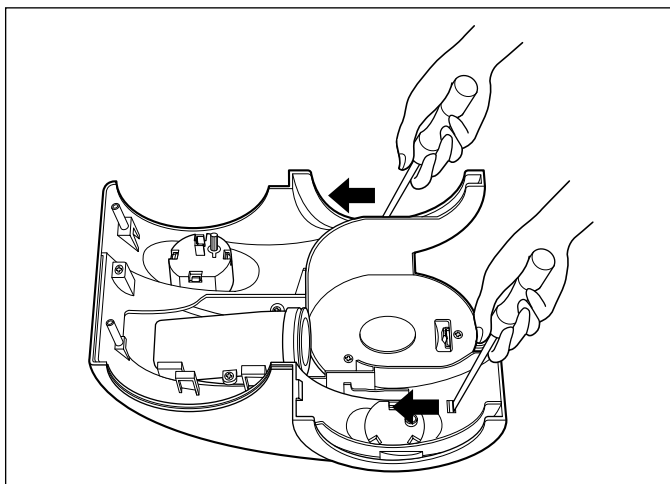


5. Disassembly of Body Base Assembly

- 1) Remove the two screws fastening, the motor housing cover.

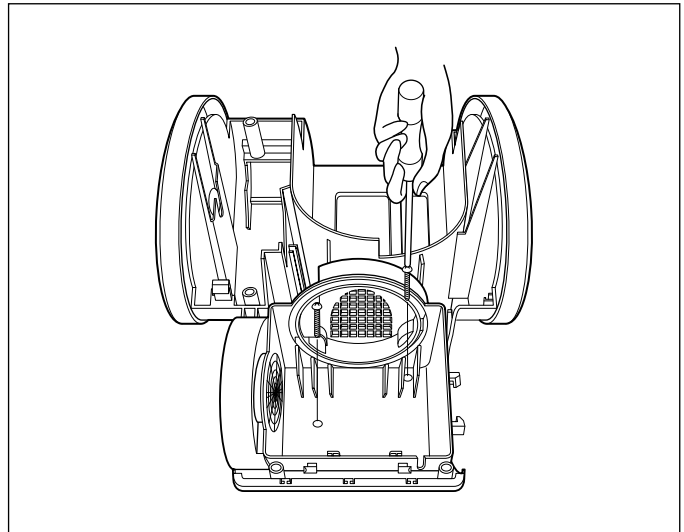


TROUBLE SHOOTING GUIDE


1. SWITCH ON BUT MOTOR DOES NOT TURN.

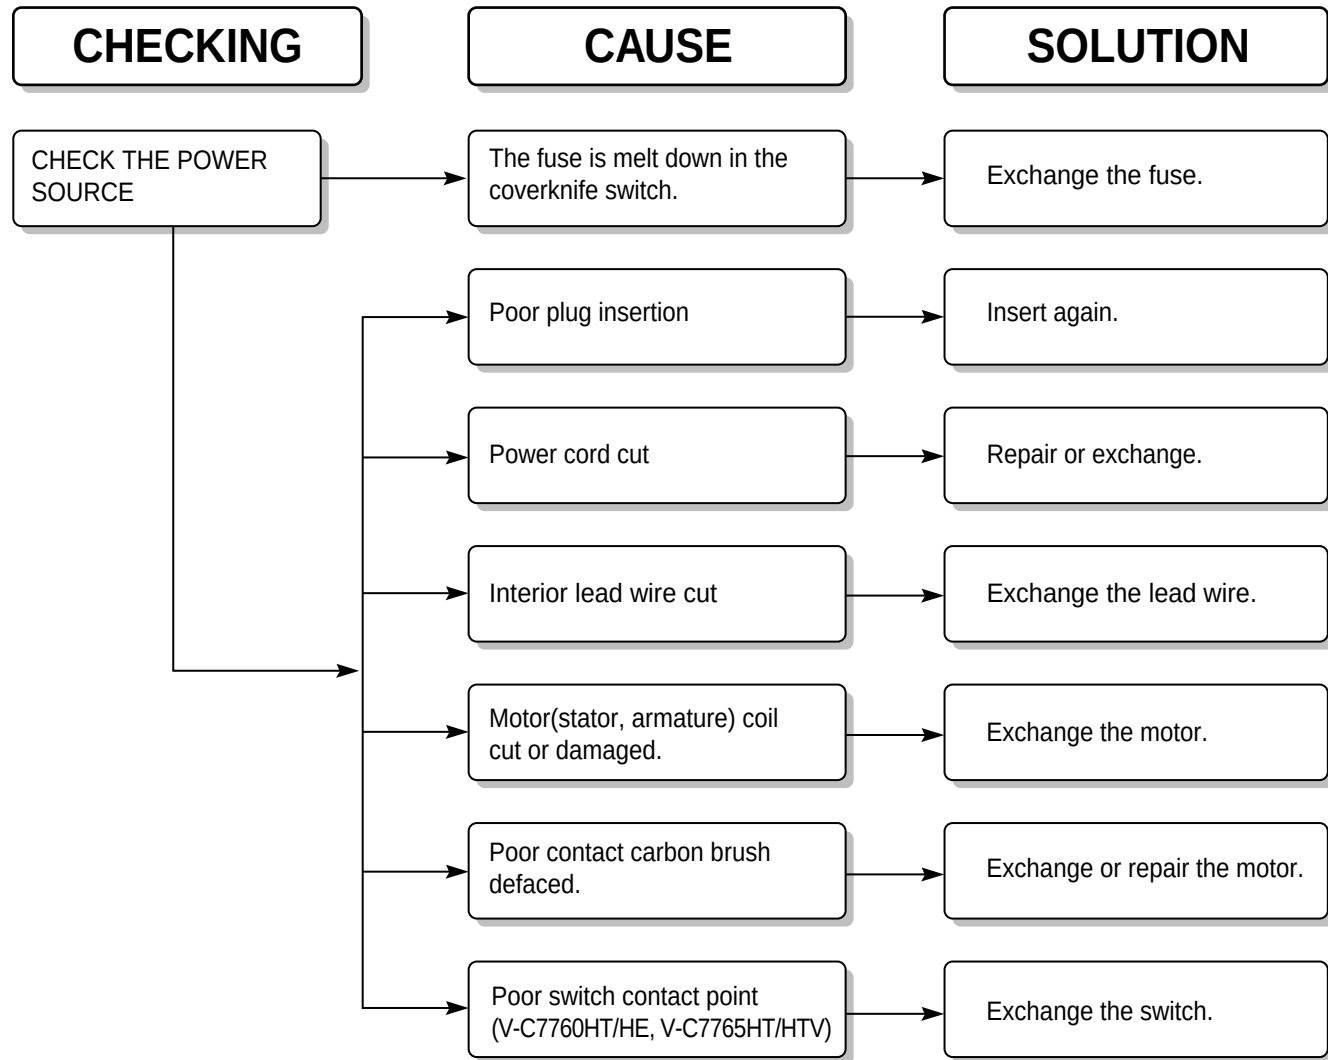


2. SWITCH ON, MOTOR DOES NOT TURN BUT BUZZES.

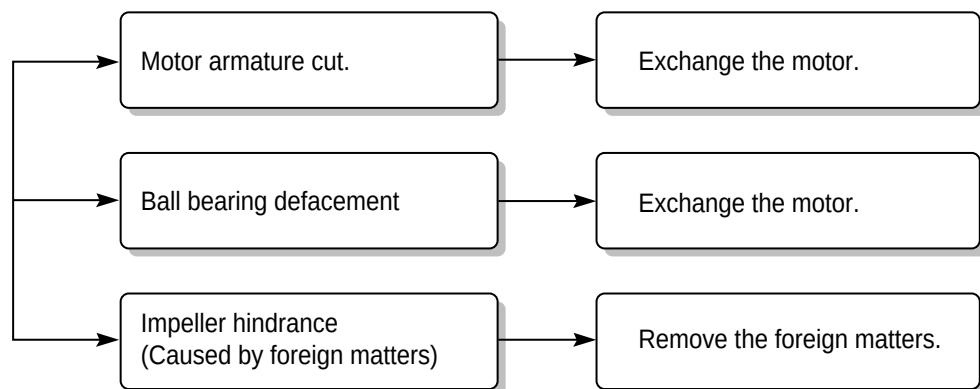


3. SWITCH OFF BUT MOTOR TURNS

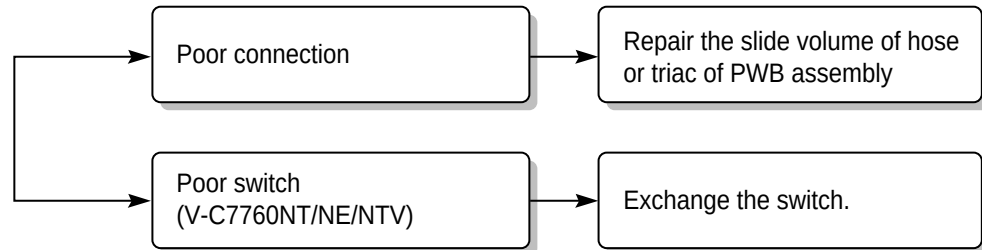


4. WEAK SUCTION POWER

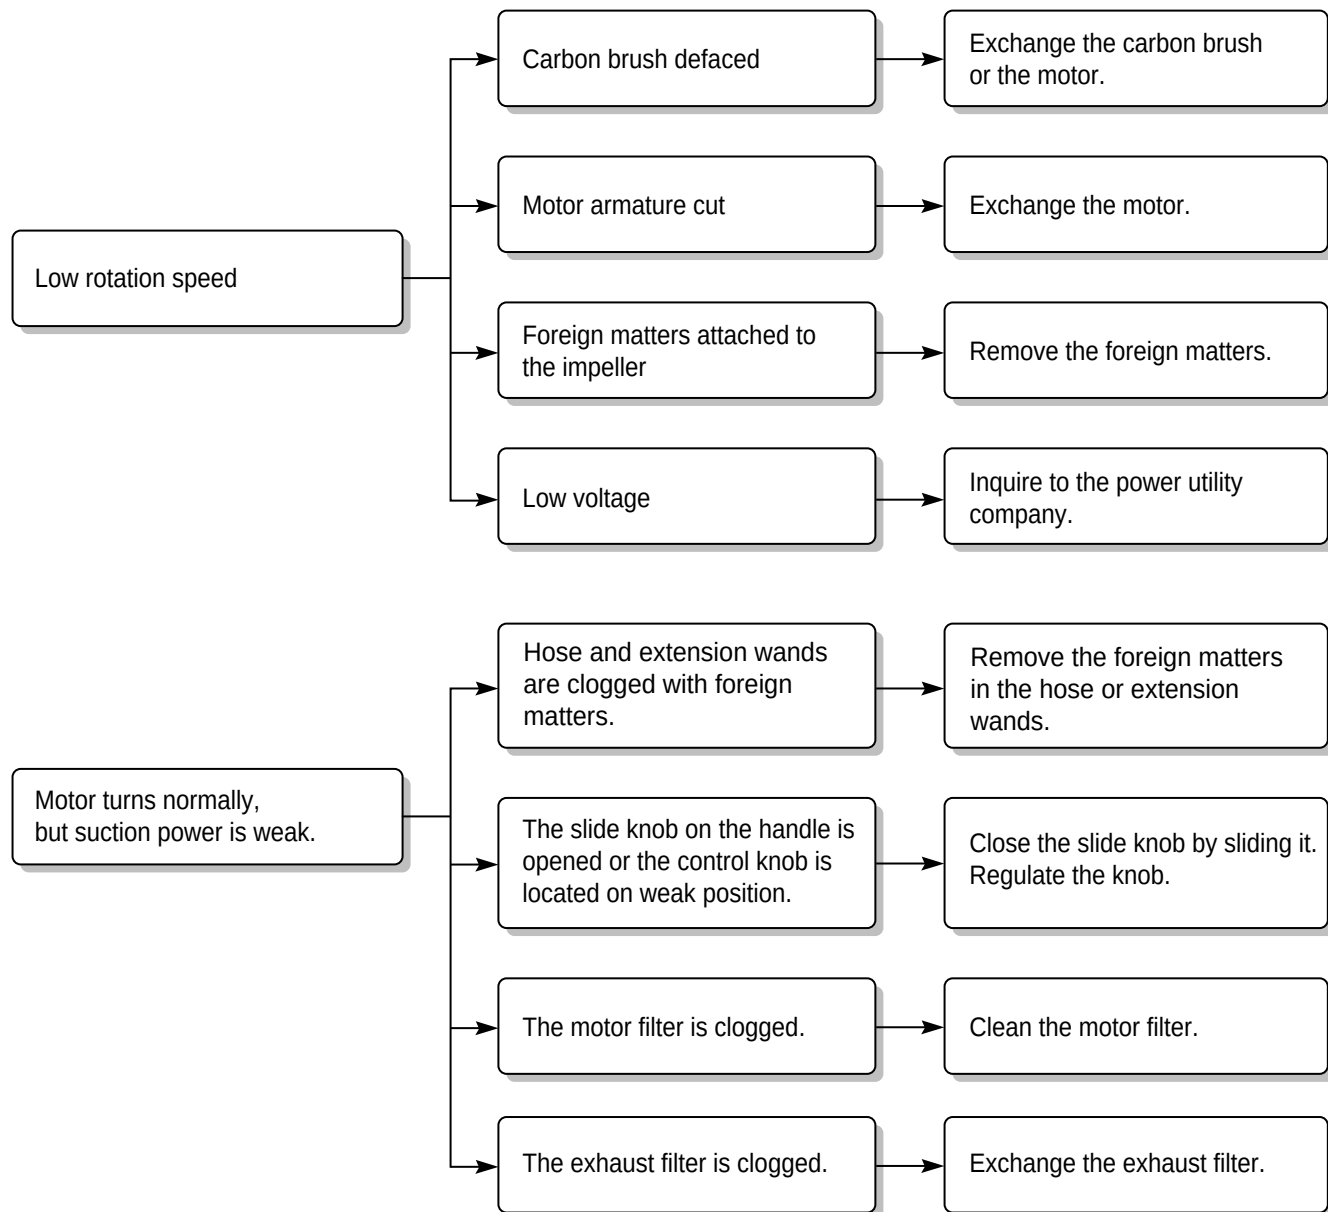


5. VIBRATION NOISES

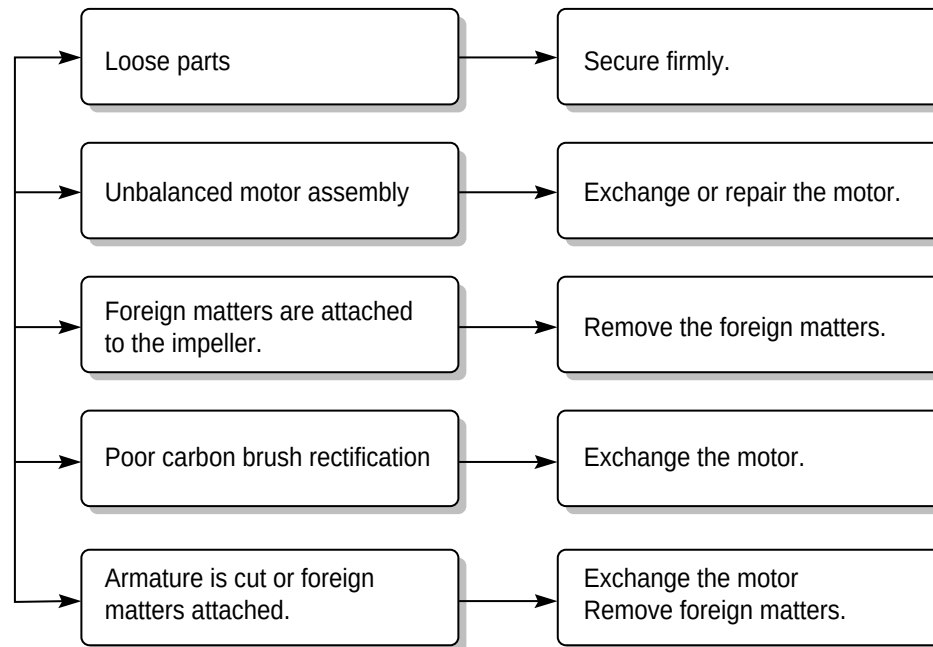


6. RADIO, TV RECEPTION DISTURBANCE

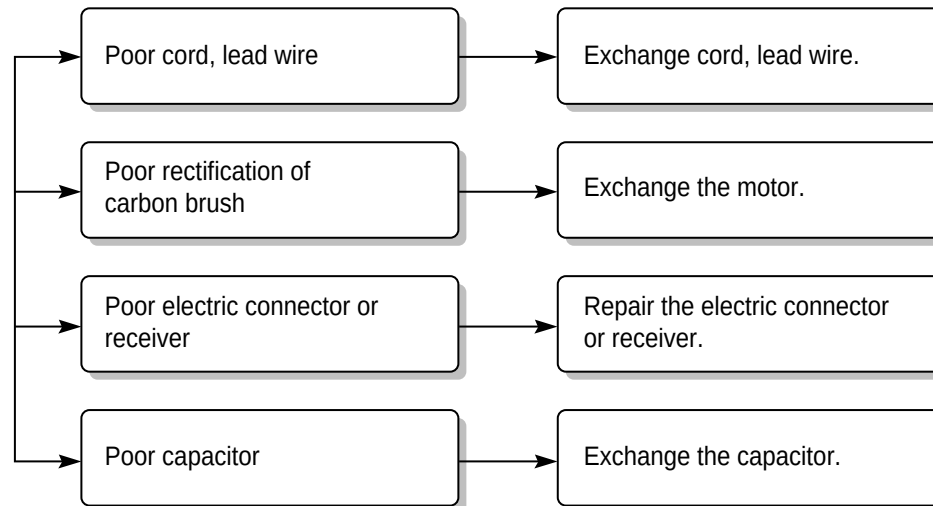


7. IMPROPER TUBE OF NOZZLE CONNECTION

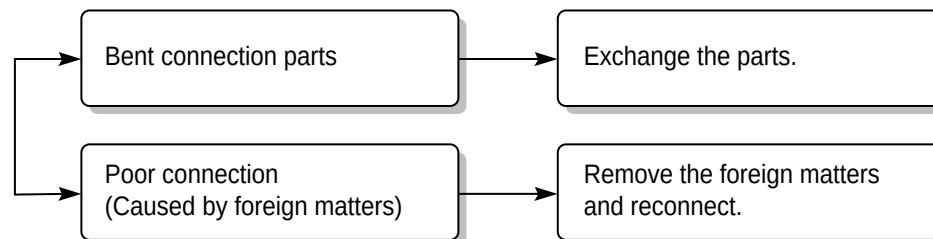


BLOCK DIAGRAM

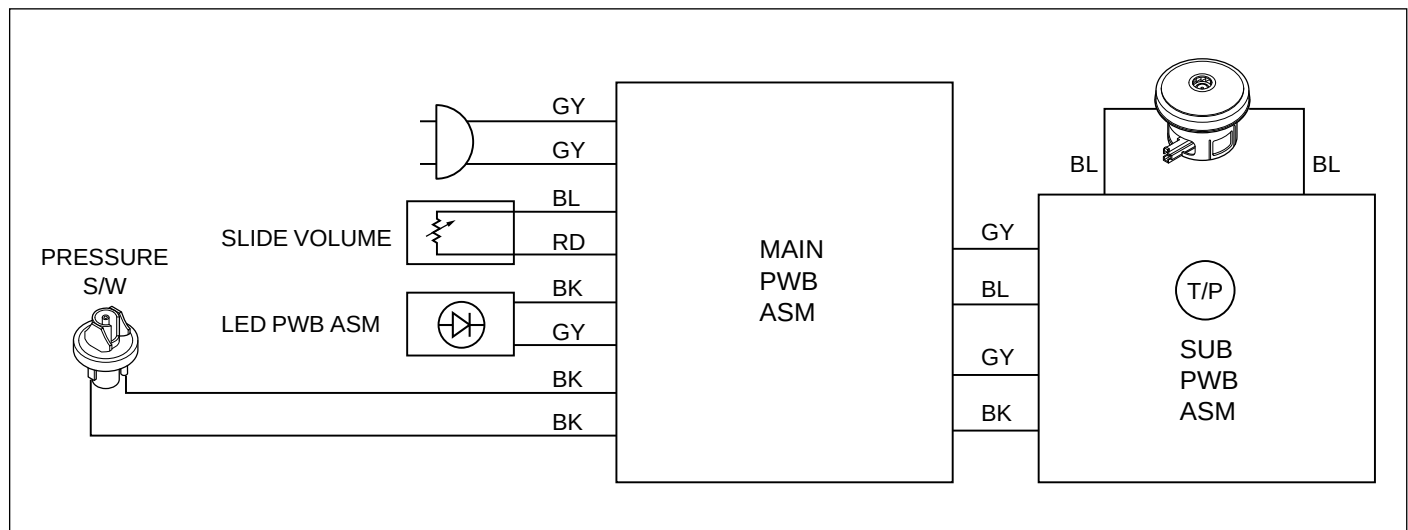

SCHEMATIC DIAGRAM

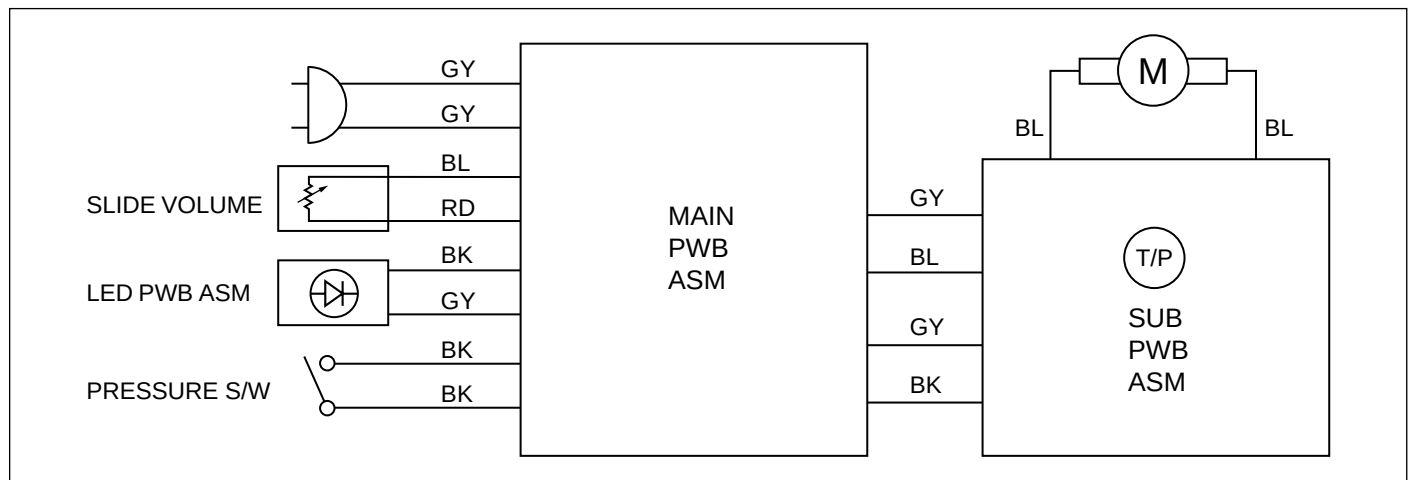


CIRCUIT DIAGRAM


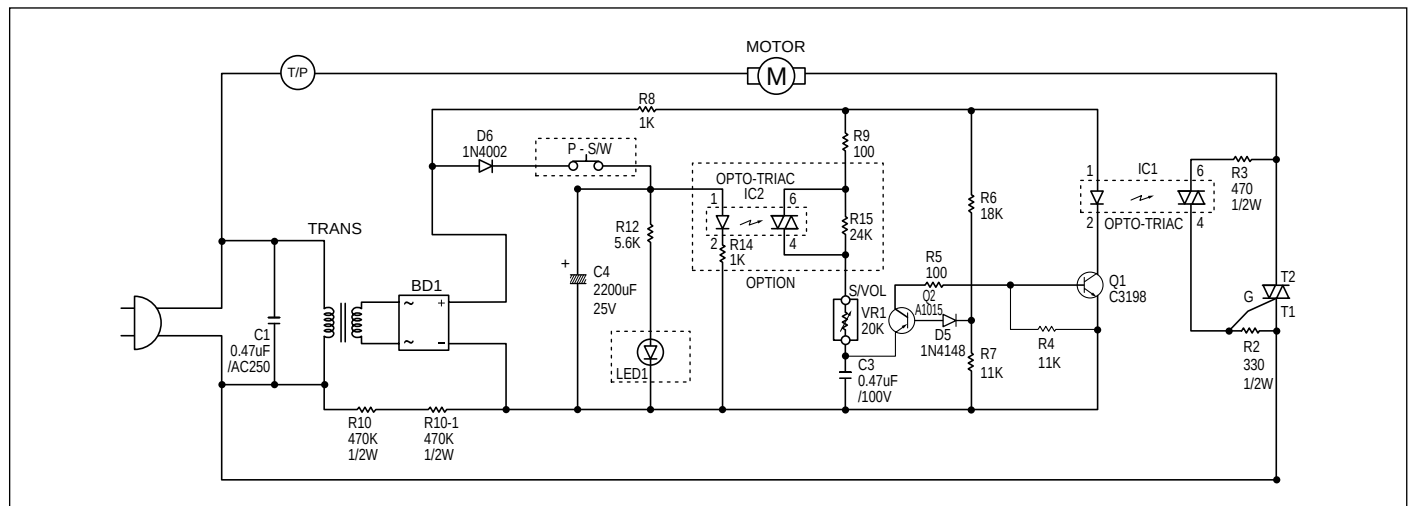


EXPLODED VIEW


BASE ASSEMBLY, BODY

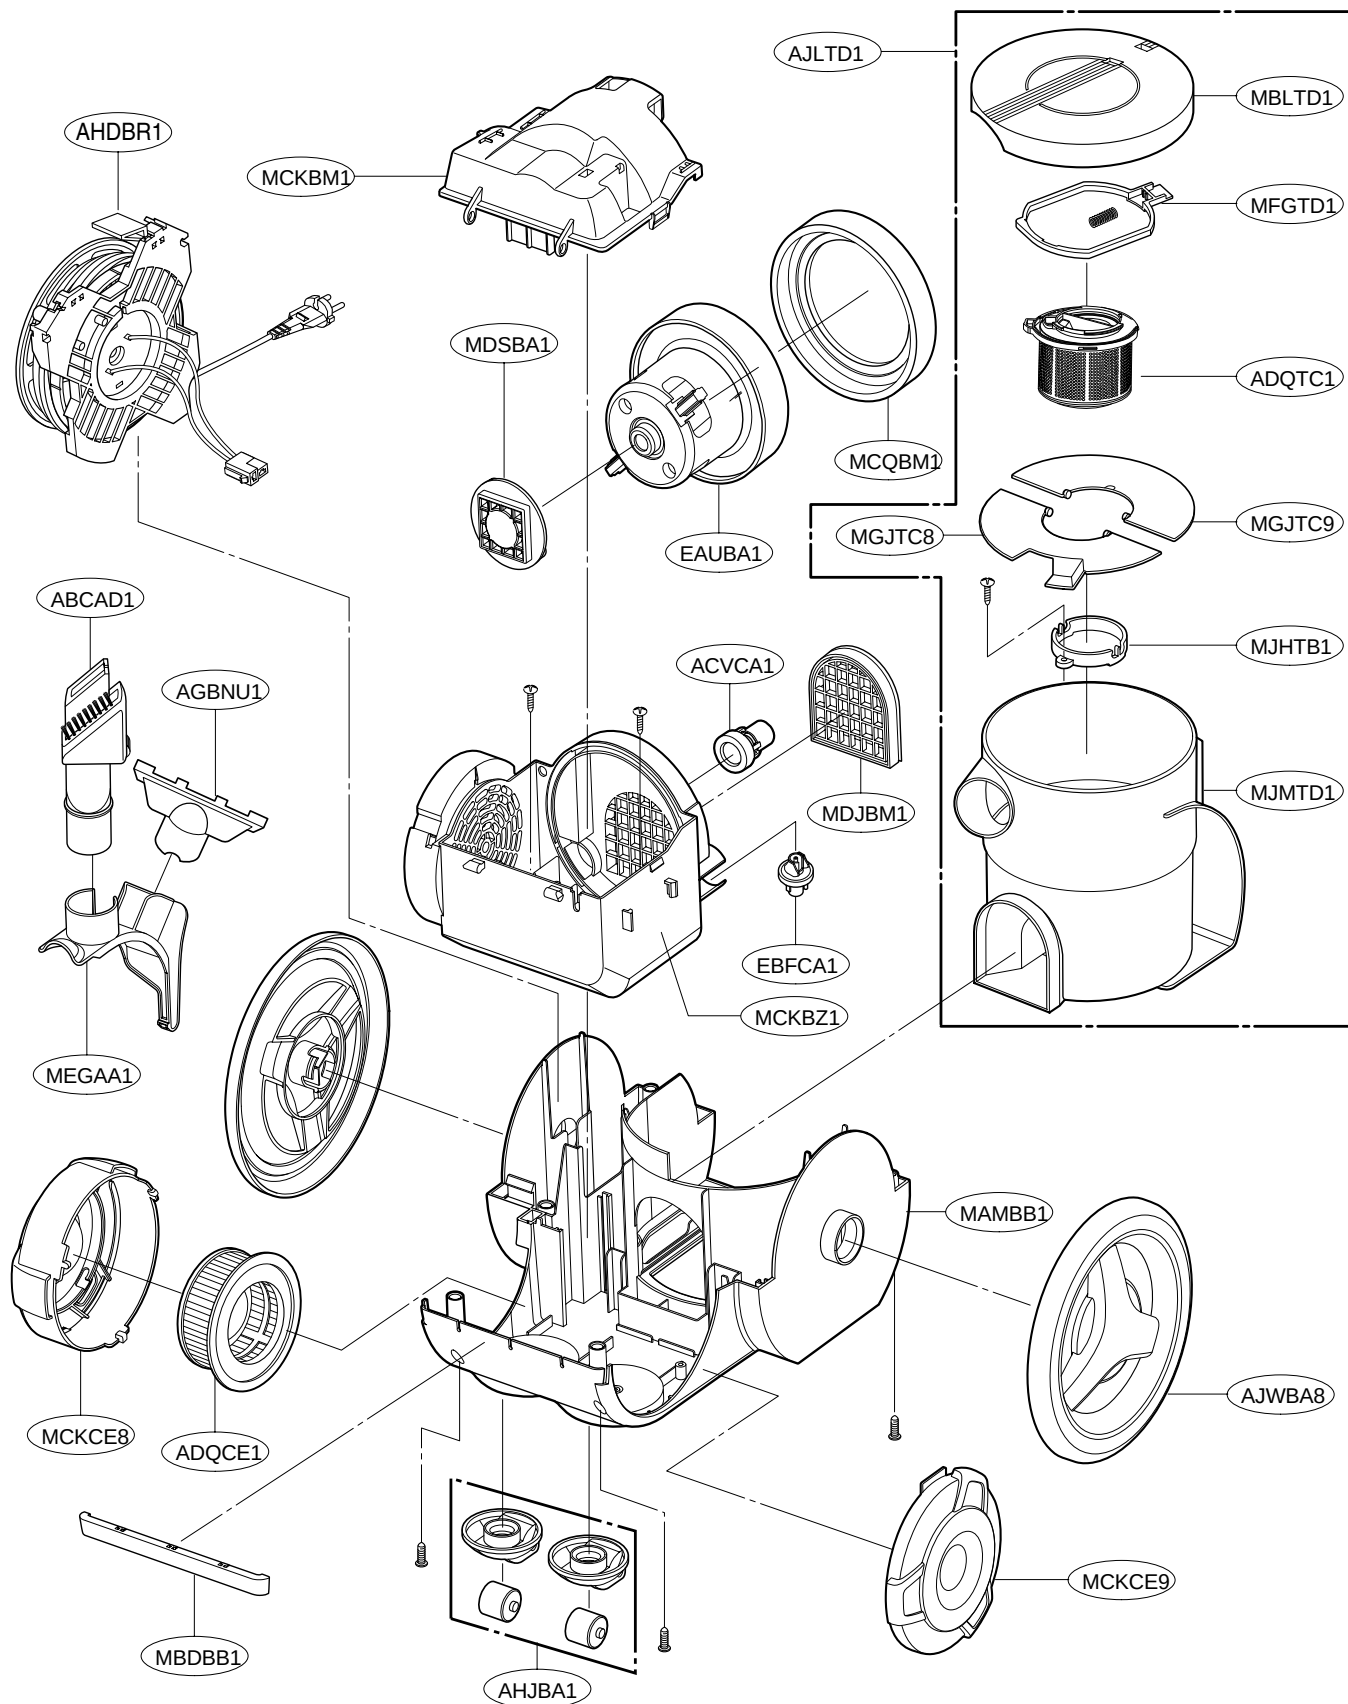


COVER ASSEMBLY, BODY

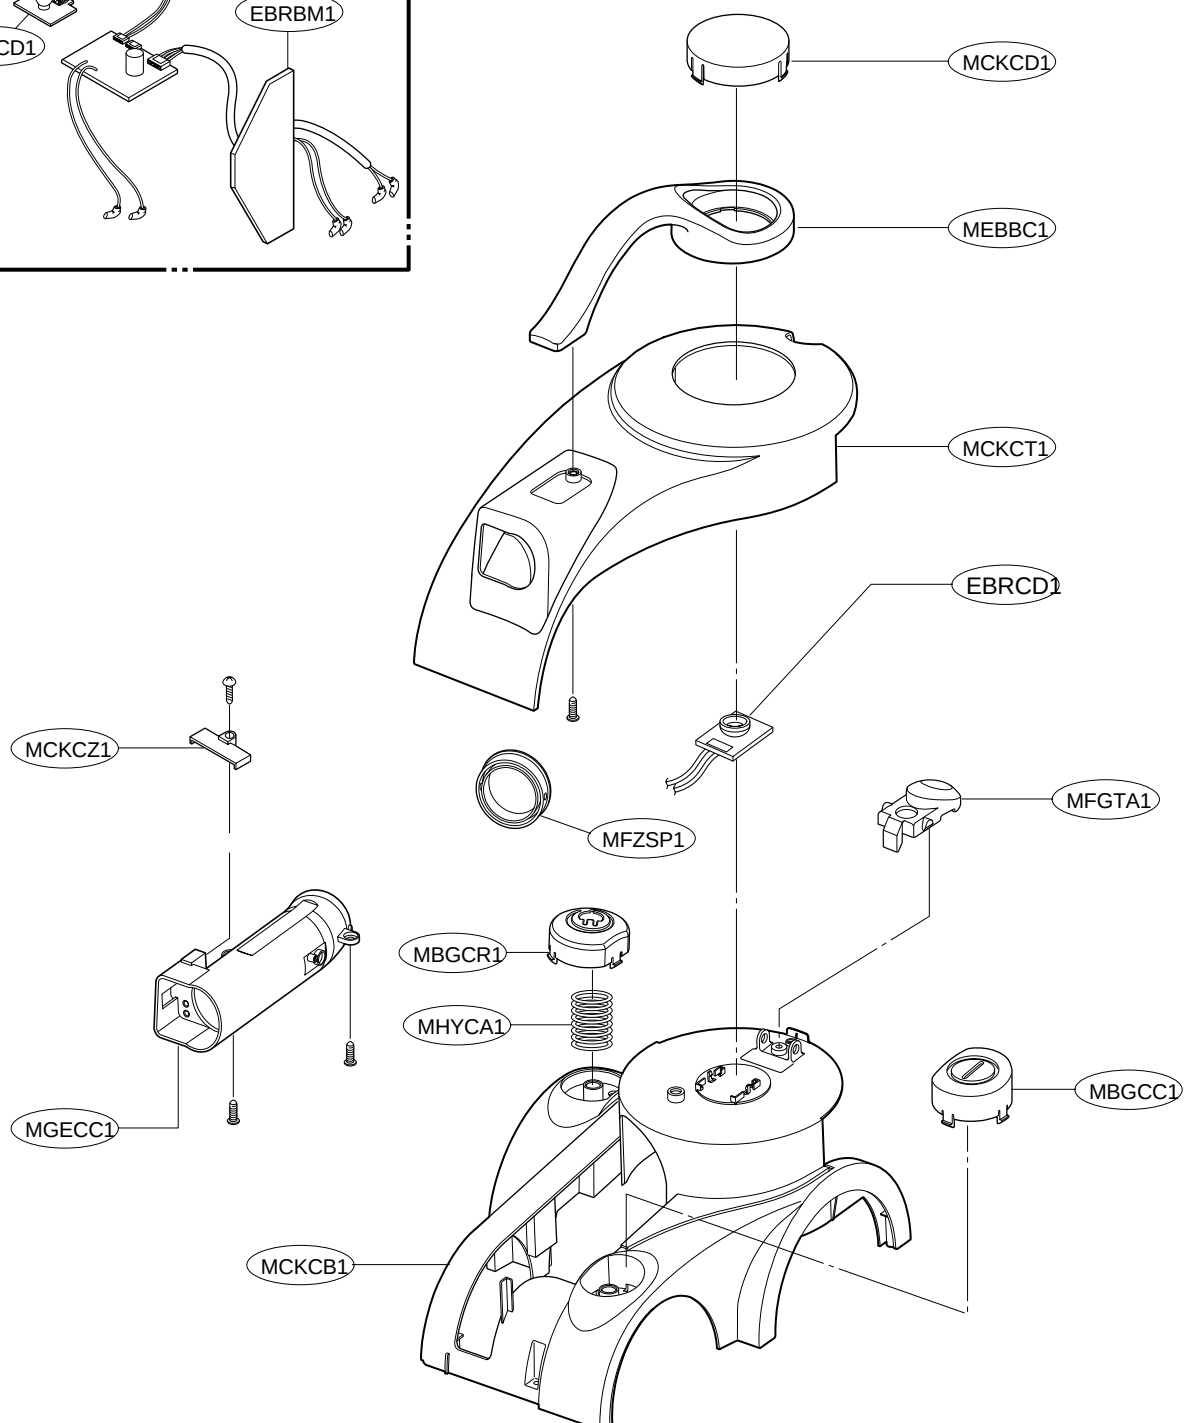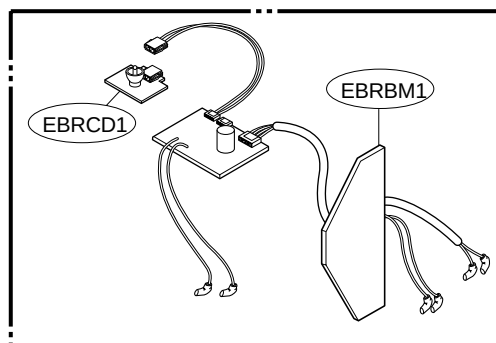


CT

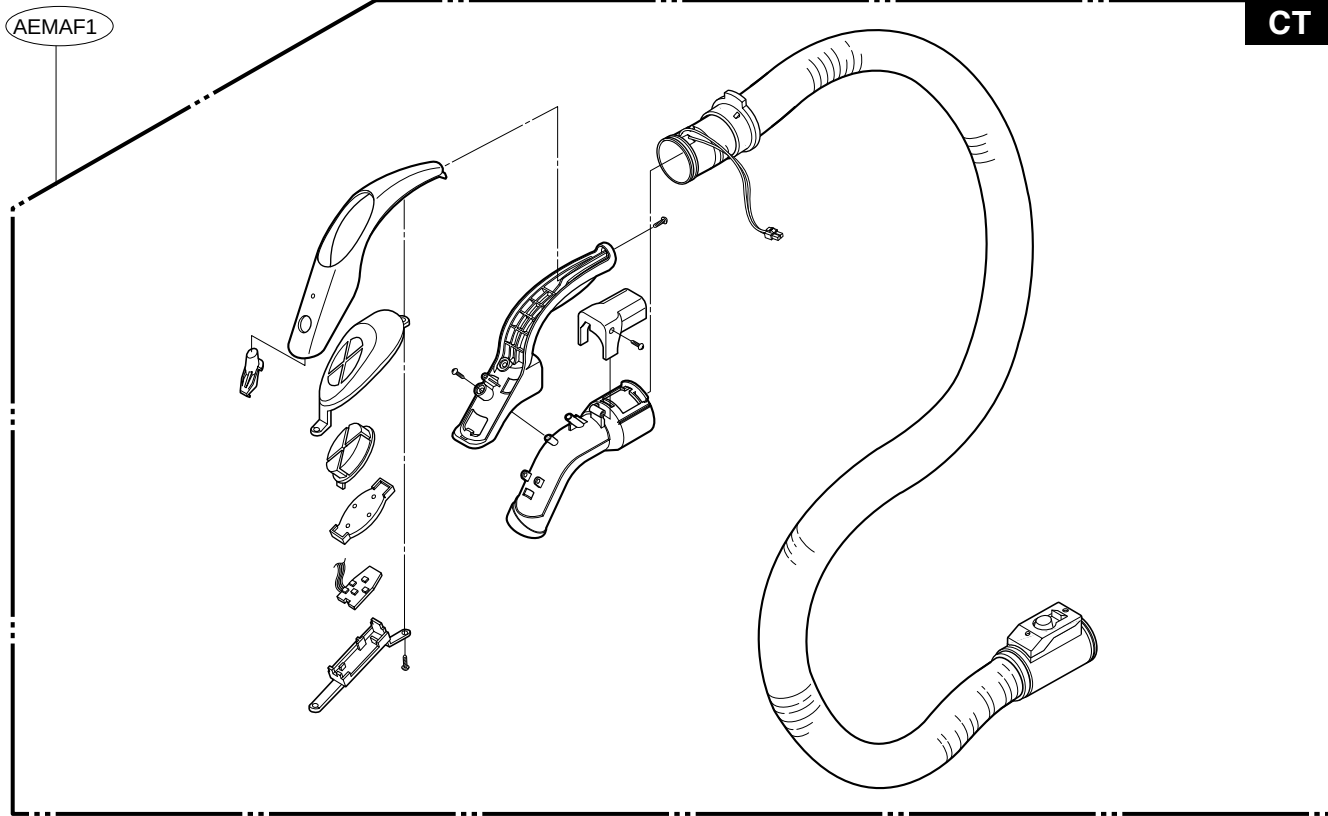


AGBN41

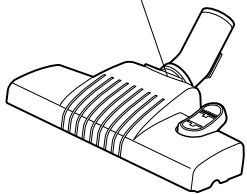


AGBN14

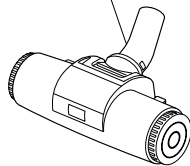


AGRPT1

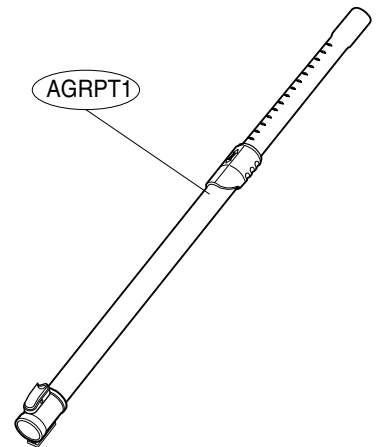


AGBNU1

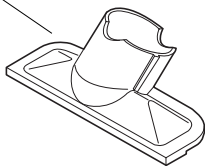


ADQTC1

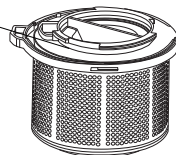

AGRAE1

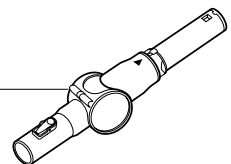

MEGAA1

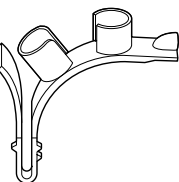

ABCAD1

